




R/L

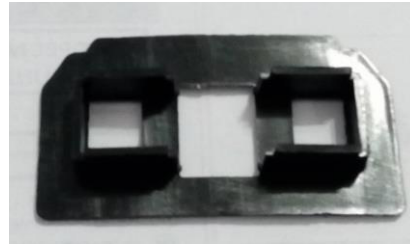


R/L

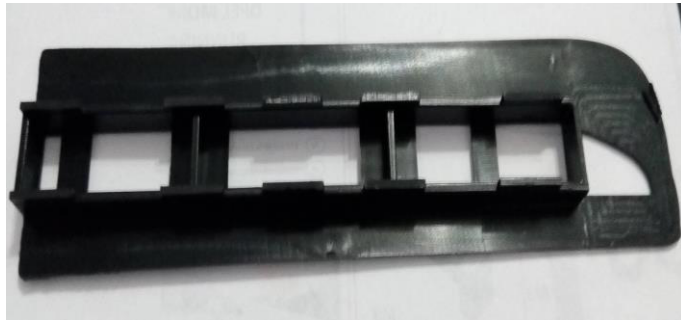

RX2/L x2

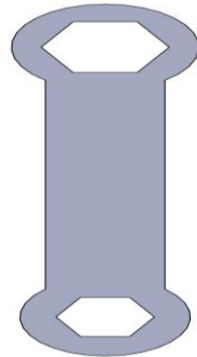

(x1)

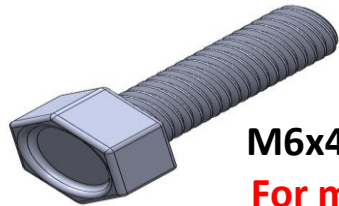


MITTE  
M6x40 (x2)  
For middle




(x1)

M6x65 (x4)

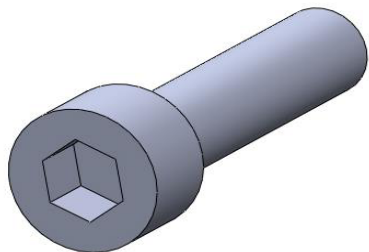

(x4)

M6 (x6)

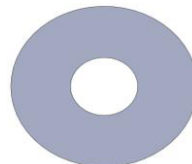

# MONTAGEANLEITUNG

*Products & Quality*

**RENAULT TRAFIC SHORT 2015 →  
OPEL VIVARO 2015 →  
SKYPORT ROOF RAIL**



# instructions


**FRONT 1**

VORNE




**MIDDLE 1**

MITTE 1

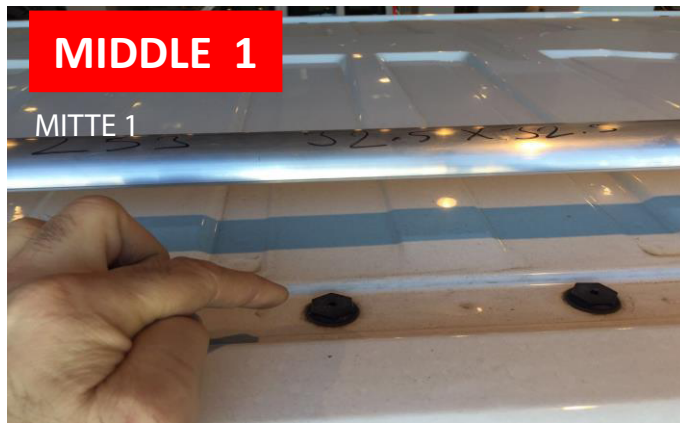

**MIDDLE 2**

MITTE 2

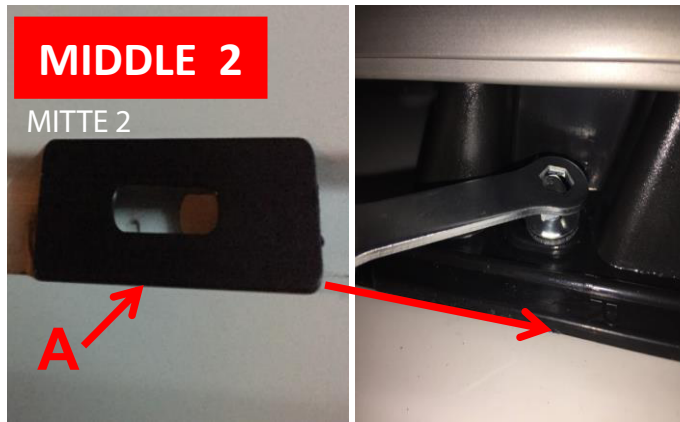

HINTEN

**REAR 1**



VOR DEM  
FESTZIEHEN BITTE  
SILIKON EINFÜLLEN

**Put the cilicon  
before ghten  
up to the  
screws.**

