



R/L

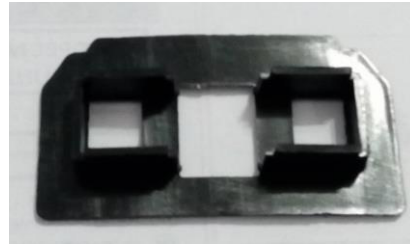


R/L



RX2/L x2

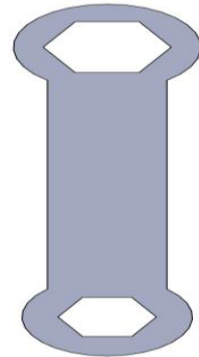

(x1)

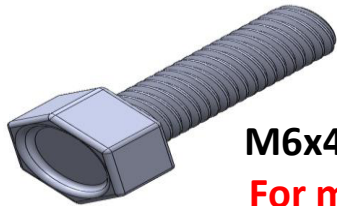


MITTE
M6x40 (x2)
For middle




(x1)

M6x65 (x4)

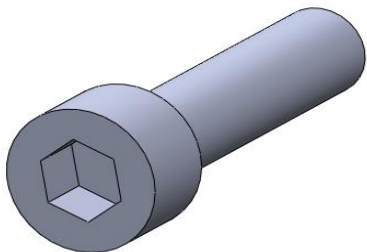

(x4)

M6 (x6)

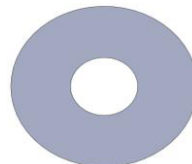

MONTAGEANLEITUNG

Products & Quality

**RENAULT TRAFIC SHORT 2015 →
OPEL VIVARO 2015 →
SKYPORT ROOF RAIL**



instructions

FRONT 1

VORNE




MIDDLE 1

MITTE 1



MIDDLE 2

MITTE 2

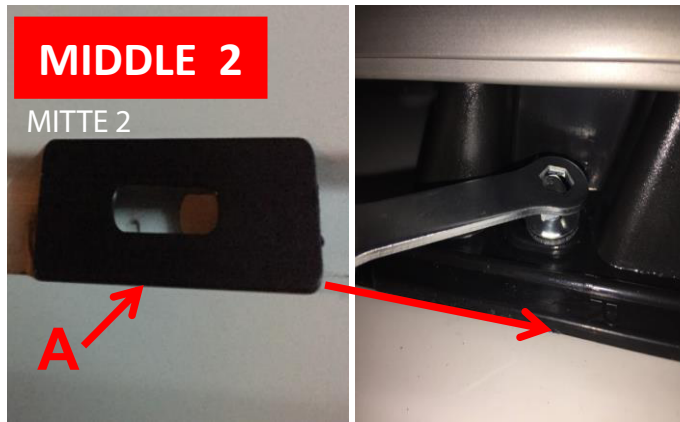

HINTEN

REAR 1



VOR DEM
FESTZIEHEN BITTE
SILIKON EINFÜLLEN

**Put the cilicon
before ghten
up to the
screws.**

